

# Model SUPER635 Parts List

Ref No.	Part No.	Description
1	SU3501	Top Cap
2	SU3502	Cap O-Ring
3	SU3503	Piston O-Ring
4	SU3504	Piston set
5	SU3505	O-Ring
6	SU3506	Cylinder
7	SU3507	Bumper
8	SU3508	O-Ring
9	SU3509	Sleeve
10	SU3510	O-Ring
11	SU3511	O-Ring
12	SU3512	O-Ring
13	SU3513	O-Ring
14	SU3514	Valve
15	SU3515	Valve Spring
16	SU3516	O-Ring
18	SU3518	Valve Seat
19	SU3519	O-Ring
20	SU3520	O-Ring
21	SU3521	Trigger Valve Stem
22	SU3508	O-Ring
23	SU3523	Trigger Valve Cover
24	SU3524	Bolt
25	SU3525	Bolt
26	SU3526	Bolt
27	SU3527N	Front Plate
28	SU3528	Round Head Screw
29	SU3529	Guiding Plate
30	SU3530	Safety Cover
31	SU3531	Safety A Seat
33	SU3533	Safety Spring
34	SU3534	Safety A
35	SU3535	Adjust Knob
36	SU3536	E-Ring
37	SU3537	O-Ring
38	SU3538	Safety
39	SU3539	No Mark Tip
40	SU3540	Magazine
41	SU3541	Plats
42	SU3542	Flat HD. Screw
43	SU3543	Bolt
44	SU3544	Spring Washer
45	SU3545	Latch
46	SU3546	Bottom
47	SU3547	Bottom Spring
48	SU3548	Magazine Cover
49	SU3549N	Pin
50	SU3550	Bolt Flat Head
51	SU3551	Spring Guide Seat A
52	SU3552	Spring Guide
53	SU3553	Pusher A
54	SU3554	Lock Out Spring
55	SU3555	Lock Out Pin
56	SU3556	Spring Guide Seat B
57	SU3557	Spring
58	SU3558	Pusher Spring
59	SU3559	Pusher L
60	SU3560	Pusher C
61	SU3561	Pin
62	SU3562	Pin
63	SU3563	Trigger
64	SU3564	Secondary Trigger
65	SU3565R	O-Ring
66	SU3566	Body
67	SU3567	D-Ring
68	SU3568	End Cap
69	SU3569	Plug
70	SU3570	Drive Guide
71	SU3571	Pin A
72	SU3572	Pin B
73	SU3573	Nut
74	SU3574	Hook
75	SU3575	Bolt
76	SU3576	Valve Seat Spring
77	SU3577	O-Ring

